

EZI REMOVAL INSTRUCTIONS

STEP 1



Figure 1

Press into the Eziblank panel (Fig 1). The flexibility of the plastic allows the panel to bend back.

STEP 2



Figure 2

The right hand side is raised enough to place your fingers underneath (Fig 2 & Fig 3).



Figure 3

STEP 3



Figure 4

Simply pull the panel off from the right hand side rail (Fig 4).

STEP 4

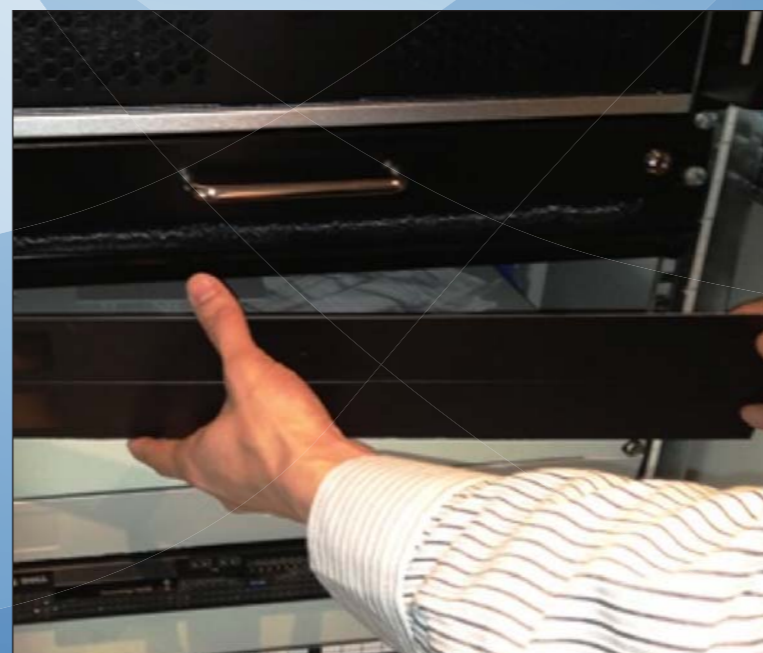


Figure 5

Continue to pull the whole panel off (Fig 5).
Ezi!



Brought to you by IDC Solutions Pty Ltd

P: +61 2 9690 2852

E: enquiries@idcsolutions.com.au

www.idcsolutions.com.au